

本書は製品とともに大切に保管してください Please keep this guide carefully with the product.

NE3108-005 10GBASE-SR 光モジュール ユーザーズガイド

Optical module for 10GBASE SR User's Guide

まえがき

このたびは NE3108-005 10GBASE-SR 光モジュールをお買い上げいただきまことにありがとうございます。

本書は、NE3108-005 10GBASE-SR 光モジュール (以下「本製品」と呼びます)を正しく、安全に設置、使用するための手引きです。本製品を取り扱う前に必ずお読みください。また、本製品を使用する上でわからないこと、不具合が起きたときにもぜひご利用ください。本書は、必要な時にすぐに参照できるように必ずお手元に保管してください。

本製品を取り付ける基本処理装置(以下「本体装置」と呼びます)の取り扱いについての説明は、本体装置に添付されたユーザーズガイドを参照してください。また、本製品を取り扱う前に「使用上のご注意」、「取り扱い上のご注意」を必ずお読みください。

Preface

Thank you very much for purchasing the NE3108-005 Optical module for 10GBASE SR.

This is a guide to the safe and proper use of the NE3108-005 Optical module for 10GBASE SR (hereafter, this product). Be sure to read this guide before handling this controller. Please refer to this document if there is something that you do not understand or a problem occurs while using this controller. Store this guide close to this controller for easy reference.

For an explanation on the handling of the basic processing unit (hereafter, Computer) that this controller is installed in, please refer to the User's Guide that came with the basic processing unit. In addition, be sure to read the sections entitled "Safety Precautions" and "Precautions on Use" before handling this product.

商標について

記載の会社名および商品名は各社の商標または登録商標です。

Ethernet は 米国 Xerox Corporation の商標です

Microsoft とそのロゴおよび Microsoft Windows, Windows は米国 Microsoft Corporation の米国およびその他の国における登録商標です。

本文中には™、®マークは明記していません。

Concerning trademarks

All other product names mentioned are trademarks or registered trademarks of their respective owners and should be treated as such.

Ethernet is a registered trademark of Xerox Corporation.

PCI-EXPRESS is a trademark of PCI-SIG. Any other trademarks or trade names mentioned are the property of their respective owners.

Microsoft and its logo and Windows are all registered trademarks of Microsoft Corporation in the United States of America and/or other countries.

ご注意

- (1) 本書の内容の一部または全部を無断転載することは禁止されています。
- (2) 本書の内容に関しては将来予告なしに変更することがあります。
- (3) NECの許可なく複製・改変などを行うことはできません。
- (4) 本書は内容について万全を期して作成いたしましたが、万一ご不審な点や誤り、記載もれなどお気づきのことがありました ら、お買い求めの販売店にご連絡ください。
- (5) 運用した結果の影響については(4)項にかかわらず責任を負いかねますのでご了承ください。

Note

- (1)No part of this document may be reproduced without consent.
- (2) The content of this document may be changed without prior notice.
- (3)No part of this document may be revised or reproduced without the permission of NEC Corporation.
- (4)Although great care has been taken to ensure the accuracy and completeness of the information contained in this document, please contact the dealer you purchased this controller from if you have any questions or find mistakes or omissions.
- (5) Notwithstanding the preceding item (4), NEC Corporation shall not be liable for any consequences resulting from the use of this controller.

このユーザーズガイドは、必要なときすぐに参照できるように必ずお手元に保管してください。 「使用上のご注意」および「取り扱い上のご注意」を必ずお読みください。



使用上のご注意 ~ 必ずお読みください ~

本製品を安全に正しくご使用になるために必要な情報が記載されています。また、本文中の名称については、本書の「各部の名称と機能」の項をご参照ください。

安全にかかわる表示

本書では危険の程度を表す言葉として、「警告」と「注意」という用語を使用しています。それぞれの用語は次のような意味を持つものとして定義されています。

\wedge	<u> 荷女</u> <u> </u>
/	

人が死亡する、または重傷を負うおそれがあることを示します。



火傷や怪我などを負うおそれや物的損害を負うおそれがあることを示します。

表示は次の3種類の記号を使って表します。それぞれの記号は次のような意味を持つものものとして定義されています。

\triangle	注意の喚起	この記号は危険が発生するおそれがあることを表します。記号の中の絵表示は危険の内容を図案化したものです。	(例) (感電注意)
\Diamond	行為の禁止 この記号は行為の禁止を表します。記号の中や近くの絵表示してはならない行為の内容を図案化したものです。		(例)
	行為の強制	この記号は行為の強制を表します。記号の中の絵表示は、しなければならない行為の内容を図案化したものです。危険を避けるためにはこの行為が必要です。	(例) 8:5 (コードを抜け)

注意の喚起



特定しない一般的な注意・警告を示します。



高温による傷害を負うおそれがあることを示します。



感電のおそれがあることを示します。



発煙または発火のおそれがあることを示します。

行為の禁止



特定しない一般的な禁止を示します。



本装置を分解・修理・改造しないでください。 感電や火災のおそれがあります。

行為の強制



特定しない一般的な使用者の行為を指示します。説明に従った操作をしてください。



本装置の電源コードをコンセントから抜い てください。火災や感電のおそれがありま す

安全上のご注意

本製品を安全にお使いいただくために、ここで説明する注意事項をよく読んでご理解し、安全にご活用ください、記号の説明については巻頭の「安全にかかわる表示」の説明をご参照ください。





人命に関わる業務や高度な信頼性を必要とする業務には使用しない

本製品は、医療機器、原子力設備や機器、航空宇宙機器、輸送設備や機器など、人命に関わる設備や機器および高度な信頼性を必要とする設備や機器などへの組み込みやこれら機器の制御などを目的とした使用は意図されておりません。これら設備や機器、制御システムなどに本製品を使用した結果、人身事故、財産損傷などが生じても当社はいかなる責任も負いかねます。



ご自分で分解、修理、改造はしない

本書に記載されている場合を除き、絶対に分解したり、修理・改造を行ったりしないでください。装置が正常に動作しなくなるばかりでなく、感電や火災の危険があります。故障の際はお買い求めの販売店または保守サービス会社にご連絡ください。



電源プラグを差し込んだまま取り扱わない



本製品の取り付け/取り外しは、本体装置の電源を OFF にして、電源プラグをコンセントから抜いて行ってください。たとえ電源を OFF にしても、電源コードを接続したまま装置内の部品やケーブル/コネクタに触ると感電したり、ショートにより火災を起こしたりすることがあります。また、ぬれた手で本装置の取り付け・取り外しを行わないでください。故障するばかりでなく、感電するおそれがあります。



煙や異臭・異音がしたまま使用しない

万一、煙・異臭・異音などが生じた場合は、ただちに電源を OFF にして電源コードをコンセントから抜いてください。その後、お買い求めの販売店または保守サービス会社にご連絡ください。 そのまま使用すると火災の原因となります。



<u> 注意</u>



ケーブル部を持って引き抜かない

本体装置の電源コードなどを抜くときはコネクタ部分およびタブを持ってまっすぐに引き抜いてください。ケーブル部分を持って引っ張ったりコネクタ部分に無理な力を加えたりするとケーブル部分が破損し、火災や感電の原因となります。

〈次頁に続く〉

注意



高温に注意する

本体装置の電源をOFFにした直後は、装置内の部品が高温になっています。十分に冷めたことを確認してから取り付け/取り外しを行ってください。



確実に接続する

本製品を本体装置の PCI EXPRESS スロットに接続するときは、確実に差し込んでください。完全に差し込まなかった場合、発煙や発火のおそれがあります。



中途半端に差し込まない

電源コードおよびケーブルは根本までしっかりと差し込んでください。中途半端に差し込むと接触不良 のため発熱し、火災の原因となることがあります。また差し込み部にほこりがたまり、水滴などが付くと 発熱し、火災の原因となるおそれがあります。



指定以外のインタフェースケーブルを使用しない

インタフェースケーブルは、指定するものを使用し、接続する装置やコネクタを確認した上で接続してください。指定以外のケーブルを使用したり、接続先を誤ったりすると、ショートにより感電や火災を起こすことがあります。



インタフェースケーブルの取り扱いや接続について次の注意をお守りください。

- ・破損したケーブルを使用しない。
- ケーブルを踏まない
- ケーブルの上にものを載せない
- ・ケーブルを改造・加工・修復しない

また、Fibre Channel ケーブルを取り外すときは、ラッチを押さえて、コネクタ部分を持って真っ直ぐに引き抜いてください。Fibre Channel ケーブルは、当社指定のものを使用し、接続先をよく確認した上で接続してください。



Fibre Channel コネクタにカバーせず使用しない

常に Fibre Channel コネクタは付属の防塵カバーもしくは Fibre Channel ケーブルを接続した状態で使用してください。異常故障が発生した場合にレーザ光で目や皮膚を傷めることがあります。



光線を直視しない

NE3108-005 10GBASE-SR 光モジュールは通信にクラス 1 レーザ光線を使用しています。 このレーザ光線は、人体への影響はほとんどありませんが、動作中は光コネクタ端子をのぞ きこまないでください。



腐食性ガスの存在する環境で使用または保管しない

腐食性ガス(二酸化硫黄、硫化水素、二酸化窒素、塩素、アンモニア、オゾンなど)の存在する環境に設置し、使用しないでください。また、ほこりや空気中に腐食を促進する成分(塩化ナトリウムや硫黄など)や導電性の金属などが含まれている環境へも設置しないでください。装置内部のプリント板が腐食し、故障および発煙・発火の原因となるおそれがあります。もしご使用の環境で上記の疑いがある場合は、販売店または保守サービス会社にご相談ください。

Keep this user's guide on hand so that you can refer to it when necessary. Be sure to read the "Safety Precautions" and "Precautions on Use."



Safety Precautions - Read carefully -

I'his section offers essential information for the safe and proper use of this controller.

Safety Symbols

Follow all instructions in this User's Guide to ensure the safe operation of this controller This guide explains what areas pose a danger, what may result from not following safety instructions and how to avoid danger. "Warning" and "Caution" are the terms used here to express the level of danger. These terms mean the following.

WARNING WARNING	Indicates a hazard that can lead to death or serious injury.
CAUTION	Indicates a hazard that can lead to burning, injury or damage to property.

Precautions and notices against hazards are presented with one of the following 3 symbols. The individual symbols are defined as follows:

	Attention	This symbol indicates the presence of a hazard. An image in the symbol illustrates the hazard type.	(Example) (Electric shock)
\bigcirc	Prohibited Action	This symbol indicates prohibited actions. An image in the symbol illustrates a particular prohibited action.	(Example) (Do not disassemble)
	Mandatory Action	This symbol indicates mandatory actions. An image in the symbol illustrates a mandatory action to avoid a particular hazard.	(Example)

Attention

<u></u>	Indicates general cautions.	warnings	and	Indicates burns.	a hazard	that	can	lead	to
Â	Indicates a hazard electric shock.	that can lead	d to	Indicates a	hazard th	at can	lead	to fire	٠.

Prohibited Action

	Indicates a general prohibition.		Indicates prohibition of disassembly or modification.
--	----------------------------------	--	---

Mandatory Action



Safety Precautions

Please read and make sure you understand the warnings and cautions described below to use the product safely. Please refer to "Safety Symbols" at the beginning for an explanation on the symbols.



WARNING



Do not use this product for services where critical high availability may directly affect human lives.

This product is not intended to be used with or control facilities or devices concerning human lives, including medical devices, nuclear facilities and devices, aeronautics and space devices, transportation facilities and devices; and facilities and devices requiring high reliability. NEC assumes no liability for any accident resulting in personal injury, death, or property damage if this product has been used in the above conditions.





Do not disassemble, repair, or alter this product.

Never attempt to disassemble, repair, or alter this product on any occasion other than described in this guide. Failure to follow this instruction may cause an electric shock or fire as well as malfunctions of this product.



Do not handle this product during an electrical storm.

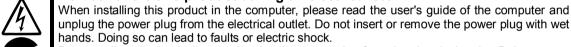

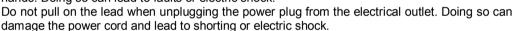



Do not use this product if any smoke, odor, or noise is present.

If smoke, odor, or noise is present, immediately turn off the POWER/SLEEP switch and disconnect the power plug from the outlet, then contact your sales agent. Using this product in such conditions may cause a fire.







Do not pull the cable when disconnecting it.

When disconnecting the cable from the device, hold the cable connector/cable tag and pull it straight out. Pulling the cable out by the cable portion or giving mechanical stress to the connector could damage the cables and connectors to result in an electrical shock hazard or a fire.

<Continued on next page.>





Avoid installation in extreme temperature conditions.

Immediately after the computer is powered off, its internal components such as hard disks are very hot. Leave the computer until its internal components fully cool down before installing/removing any component.



Connect firmly.

Please connect the product to the computer firmly. A loose connection can cause a contact failure and can lead to smoke or fire.



Insert the power plug into the outlet as far as it goes.

Heat generation resulting from a halfway inserted power plug/cable (imperfect contact) may cause a fire. Heat will also be generated if condensation is formed on dusty blades of the halfway inserted plug, increasing the possibility of fire.



Do not use any unauthorized interface cable.

Use only the interface cable that comes with this product. Use of an unauthorized interface cable may cause a fire when the electric current exceeds the rated flow. Also, observe the following to prevent an electric shock or fire caused by a damaged cord.



- > Do not use any damaged cable. (Replace a damaged cable with a new one of the same specifications. Ask your sales agent for replacement.)
- > Do not step the cable.
- Do not place any object on the cable.
- > Do not alter, modify, or repair the cable.

When disconnecting a cable, push the latch, hold the connector, and pull it out straight. Use only the Fibre Channel cable authorized by NEC and connects it to the proper connector. Ignoring these instructions may cause a short circuit, resulting in a fire, electric shock, or malfunction.



Do not use this product without Fibre Channel connector cover.

Always cover each Fibre Channel connectors with the provided cover or properly connect this product to a Fibre Channel cable.

If an abnormal fault occurs, it could cause this product to operate in a mode that may cause eye or skin damage.



Avoid direct look into the laser beam

The "NE3108-005 Optical module for 10GBASE SR" is classified as a Class 1 Laser Product. A class 1 laser will not be harmful to the human body. However, do not look directly into the LAN port during operation. Keep any vacant LC connector covered with a dust cover when you do not use it or you transport it.



Do not use or store this product in corrosive environment.

Avoid the usage or storage of this product in an environment which may be exposed to corrosive gases, such as those including but not limited to: sulfur dioxide, hydrogen sulfide, nitrogen dioxide, chlorine, ammonia and/or ozone.



Avoid installing this product in a dusty environment or one that may be exposed to corrosive materials such as sodium chloride and/or sulfur.

Avoid installing this product in an environment which may have excessive metal flakes or conductive particles in the air.

Such environments may cause corrosion or short circuits within this product, resulting in not only damage to this product, but may even lead to be a fire hazard.

If there are any concerns regarding the environment at the planned site of installation or storage, please contact your sales agent.

取り扱い上のご注意 ~本製品を正しく動作させるために~

本製品を使用するときに注意していただきたいことを次に示します。これらの注意を無視して、本製品を使用した場合、資産(データやその他の装置)が破壊されるおそれがありますので必ずお守りください。

- 本製品は静電気に弱い電子部品で構成されています。製品の取り付け・取り外しの際は、静電気による製品の故障を防止するため、帯電防止用リストストラップなどの装着により静電気を除去してください。また、帯電防止用リストストラップを使用する場合は、接地された箇所に接続して使用してください。
- 携帯電話やPHS、ポケットベルなどを近くで使用しないでください。電波による誤動作の原因となります。
- 本製品を落としたり物にぶつけたりしないでください、誤動作や故障するおそれがあります。
- 本書に記載されている説明をよくお読みになり、正しく取り扱ってください。
- 本体装置の PCI EXPRESS スロットにうまく本製品を取り付けられないときは、いったん本製品を取り 外してから取り付けなおしてください。過度の力を加えると破損するおそれがありますので注意してく ださい。

Precautions on Use - Operating this product properly -

The following precautions must be observed when using this controller. Ignoring these precautions while using this controller will result in the destruction of assets (data and other devices). Please observe the following.

- This product is sensitive to static electricity. Please discharge any static electricity by wearing antistatic wrist strap before handling the product. Moreover, connect the clip on the strap to a ground conductor.
- Turn off the cellular phone or pager. Radio interference may cause malfunctions of this product.
- Do not drop or hit the product. Doing so can lead to malfunction or failure.
- Please read this guide, and handle the product correctly.
- Please read the user's guide of the computer before connecting this product. When connecting the product, insert the product firmly into the PCI EXPRESS slot. If this product is not correctly connected to the PCI EXPRESS slot of computer, remove the product and connect it again. Using excessive force can lead to damage.

◆ 一般財団法人 VCCI 協会表示

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対応を講ずるよう要求されることがあります。

VCCI-A

◆ レーザ安全基準について

本製品に接続される NE3108-005 10GBASE-SR 光モジュールは、レーザに関する 安全基準(JIS・C-6802, IEC825)クラス 1 に適合しています。

Class 1 Laser Product

NE3108-005 Optical module for 10GBASE SR has been designed and manufactured according to IEC60825-1 on the safety label of laser product.


本書について

本書は、NE3108-005 10GBASE-SR 光モジュールを正しくセットアップし、使用できるようにするための手引きです。 本製品を使用される前に本書をよくお読みになり、いつでも取り出せる場所に大切に保管してください。本製品の移 設の際は必ず本書も一緒に移設してください。

■ 本書は、Windows などのオペレーティングシステムやキーボード、マウスといった一般的な入出力装置などの基本的な取り扱いについて十分な知識を持ったユーザを対象として記載されています。

本文中の記号

本文中では次の 3 つの記号を使用しています。それぞれの意味を示します。(「**安全にかかわる表示」**については 1 ページをご参照ください)

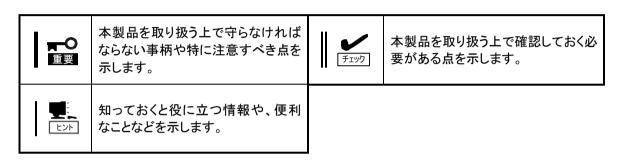


About This Guide

This guide explains how to setup and use the NE3108-005 Optical module for 10GBASE SR correctly. Be sure to read this guide before using the product, and keep the guide in a safe place after reading it. If the product is transferred to a third party, please transfer this guide along with it.

➤ This guide is written for users with sufficient knowledge in the general handling of operating systems such as Windows, a keyboard and mouse and general I/O devices.

Symbols Used in This Guide

The following three symbols are used in this guide. The meanings of the symbols are described below. (For information on safety, please refer to section "Safety Symbols".)

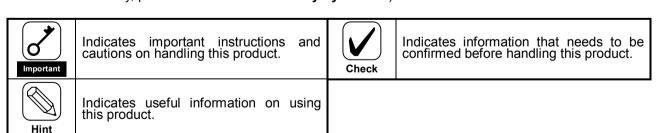

梱包箱の中身について

梱包箱の中には本製品以外に添付品が入っています。「2.構成品」を参照し、全ての添付品がそろっていることを確認してください。万一、足りないものや破損しているものがあった場合には、本製品をご購入された販売店にご連絡ください。

保証について

本製品には「保証書」が添付されています。「保証書」は販売店で所定事項を記入しお渡ししますので、記載内容をご確認の上、大切に保管してください。保証期間中に故障した場合には、「保証書」の記載内容に基づき無償修理致します。保証後の修理については、ご購入された販売店もしくはご契約されている保守サービス会社にご相談ください。

製品寿命について

本製品の製品寿命は5年です。本製品の交換については、本製品をご購入された販売店もしくはご契約されている保守サービス会社へご相談ください。

第三者への譲渡について

本製品を第三者に譲渡(または売却)する時には、必ず本書を含む全ての添付品をあわせて譲渡(または売却)してください。

ソフトウェアに関しては、譲渡した側は一切の複製物を所有しないでください。また、インストールした装置から削除した後、譲渡してください。

輸送について

本製品を輸送する際は、構成品表を参考に本体装置から本製品を取り出し、本製品とすべての添付品を購入時の梱包箱に入れてください。

データの保管について

オペレータの操作ミス、衝撃や温度変化等による装置の故障によってデータが失われる可能性があります。万一に備えて、ハードディスクドライブに保存されている大切なデータは、定期的にバックアップを行ってください。

廃棄について

本製品の廃棄については、各自治体の廃棄ルールに従って分別廃棄して下さい。詳しくは、各自治体にお問い合わせ下さい。



ハードディスクドライブやバックアップデータカートリッジ、フロッピーディスク、その他書き込み可能なメディア(CD-R/CD-RWなど)に保存されているデータは、第三者によって復元や再生、再利用されないようお客様の責任において確実に処分してから廃棄してください。個人のプライバシーや企業の機密情報を保護するために十分な配慮が必要です。

Packing Box Contents

There are various other accessories included in the packing box besides this controller. Please refer to the "2. Components" to make sure that all parts are included. Contact the dealer that you bought this controller from if any parts are missing or damaged.

Lifetime

This product has a product lifetime of five years.

The holding period for replacement parts is five years from production.

Transferring Ownership to a Third Party

When transferring ownership or selling this product to a third party, be sure to pass on this guide and all accessories together with this product.

The party transferring or selling this controller must transfer all software and maintain no copies. As well, all installed software must be deleted before this product is transferred or sold.

Transportation

When transporting this product, please refer to the packing list to remove this controller from the basic processing unit and repack it and all of its accessories into the original packing box.

Storing Data

Data may be lost through a device malfunction due to human error, physical shock, temperature change or other means. To prevent this, be sure to regularly backup essential data saved on the hard disk.

Disposal

Dispose of this cage according to governing regulations. Contact your local government for details.



Dispose the data saved in hard disks, backup data cartridges, floppy disks, and other data acceptable media (such as CD-R and CD-RW) securely in the customer's responsibility so that the data may not be restored, reproduced, and/or reused by third parties. Take sufficient notes to protect personal privacy and corporate secret information.

1.仕様

NE3108-005 10GBASE-SR 光モジュール

データ転送速度	10Gbps	
コネクタ	LC コネクタ	
動作電圧/消費電流	3. 3V/0. 25A	
動作環境	温度 0~45℃ 湿度 5~85%	ただし結露なきこと



■ 本製品は NE3108-004 2ch 10GBASE カード 専用の SFP+モジュールです。これ 以外の製品への装着はサポートしません。

2.構成品

梱包箱には次のものが入っています。全てそろっていることをご確認ください。万一、不足や破損している ものがありましたら、本製品を購入された販売店にご連絡ください。


項番	品 名	数量	備考
1	10GBASE-SR 光モジュール	1	モジュール本体(*1)
2	保証書	1	(*2)

*1:本体装置組込でご購入の場合、本製品は本体装置内に搭載されています。

*2:本体装置組込でご購入の場合、本体装置と同じ保証書に含まれます。

3.各部の名称

NE3108-005 10GBASE-SR 光モジュール

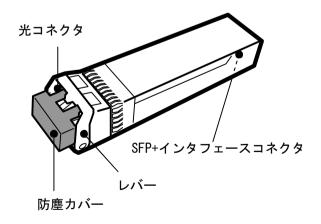


4.SFP+モジュール取り付け/取り外し手順

本製品の取り付け/取り外しは、NE3108-004 2ch 10GBASE カードを本体装置へ実装していない状態で実施してください。


取り付け方

1. 本製品を取り付けるカードの SFP スロットからスロットカバーを外す。

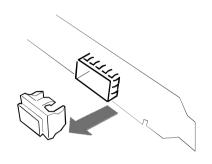

TO 重要 ■ 取り外したスロットカバーは大切に保管してください。

2. SFP スロットに本製品を挿入する。

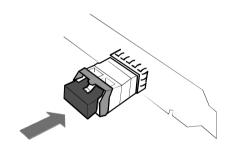





- SFP+モジュールのレバーは倒さずに挿入してく ださい。
- カチッと音がするまでしっかり挿入してください。 取り外したスロットカバーは大切に保管してくださ い。

取り外し方

- 1. 本製品のレバーを矢印方向に倒す。
- 2. SFP スロットから矢印方向に引き抜く。

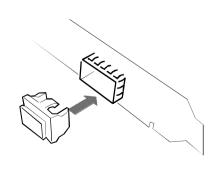

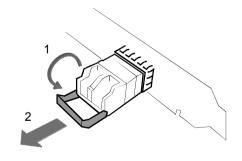


、 重要 カードには保管していたスロットカバーを取り付けて下さい。

5.ケーブル取り付け/取り外し手順

取り付け方


1. 本製品から防塵カバーを取り外す。

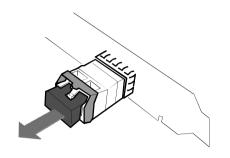



■ 取り外した防塵カバーは大切に保管してください。

2. ケーブルを挿入する。

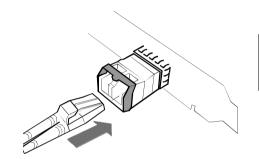



■ コネクタの接点部分が汚れていないことを確認してください



■ 本体装置の端と干渉しないようケーブルのラッチ部分を押さえて、カチッとケーブルが固定されるまでしっかり押し込んでください。



注意




光線を直視しない

NE3108-005 10GBASE-SR 光モジュールは通信にクラス1 レーザ光線を使用しています。このレーザ光線は、人体への影響はほとんどありませんが、動作中は光コネクタ端子をのぞきこまないでください。

取り外し方

1. ケーブルラッチを押さえながらケーブルを引き抜く。

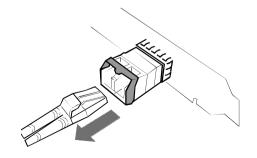



■ ケーブルを取り外した本製品には保管していた防塵カバーを取り付けてください。

1. Specifications

NE3108-005 Optical module for 10GBASE SR

Data Transfer Rate	10Gbps		
Type of Connector	LC-type Connector		
Voltage/Current	3.3V/0.25A		
Operating condition	Temperature(C) 0~45 Humidity(%) 5~85	RH (no condensation)	



■ This product is a SFP+ module of NE3108-004 2Port 10GBASE LAN Card exclusive use. The connection with the other equipment is not supported.

2. Components


The package contains the following items. Check the contents to confirm that all the items are included. If you find any of them are missing or damaged, please contact the retailer you bought the product from.

No	Item	Qty	Remarks
1	Optical module for 10GBASE SR	1	This unit(*1)

^{*1:} In the built-in the server, this Card is mounted.

3. Descriptions

NE3108-005 Optical module for 10GBASE SR

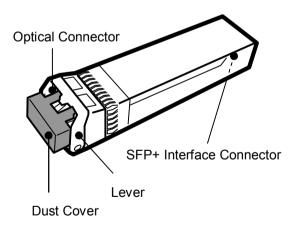


5. SFP+ module installation

It is required to remove NE3104-004 card from the computer when you install this product.

Attach the SFP+ module

1. Remove the slot cover from the SFP slot of the card.

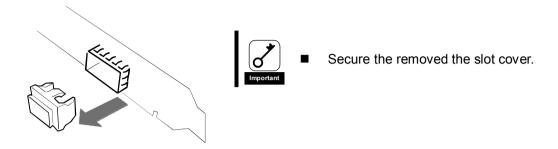



2. Insert this product.



Detach the SFP+ module

- 1. Flip down the Lever of the SFP+ module.
- 2. Remove the module from the slot toward to the arrow.

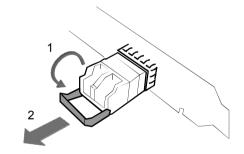

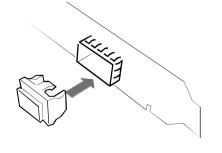




Attach the slot cover to the slot.

7. Cable installation

Attach the Cable


1. Remove the dust cover from this product.

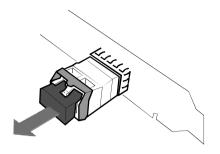



Secure the removed the dust cover.

2. Connect the network cable.

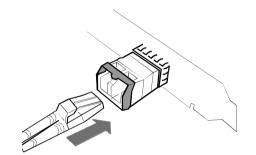



Check that the contact portion of a connector is not dirty.



Please press down a cable latch portion not to get stuck in the edge of the server chassis, and push in firmly until heard clicking sound and a cable are fixed.



CAUTION




Avoid direct look into the laser beam.

The "NE3108-005 Optical module for 10GBASE SR" is classified as a Class 1 Laser Product. A class 1 laser will not be harmful to the human body. However, do not look directly into the LAN port during operation. Keep any vacant LC connector covered with a dust cover when you do not use it or you transport it.

Detach the Cable

Remove the cable.
 Pull the cable with pressing down the latch of the cable.

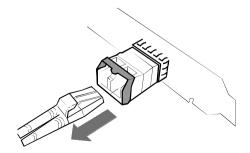



■ Attach the dust cover to this product.

NE3108-005 10GBASE-SR 光モジュール ユーザーズガイド Optical module for 10GBASE SR User's Guide

> 2013 年 4 月 初版 April 2013 First Edition

日 本 電 気 株 式 会 社 東京都港区芝五丁目7番1号 TEL(03)3454-1111(大代表)

© NEC Corporation 2013

乱丁・落丁の場合は交換いたします。